


# GB AWM 6080

- A. Programme Sequence Indicator
- B. "Start/Pause" Button
- C. "Door Open" Indication
- D. Temperature Adjusting Buttons
- E. "Spin Speed Reduction" Button

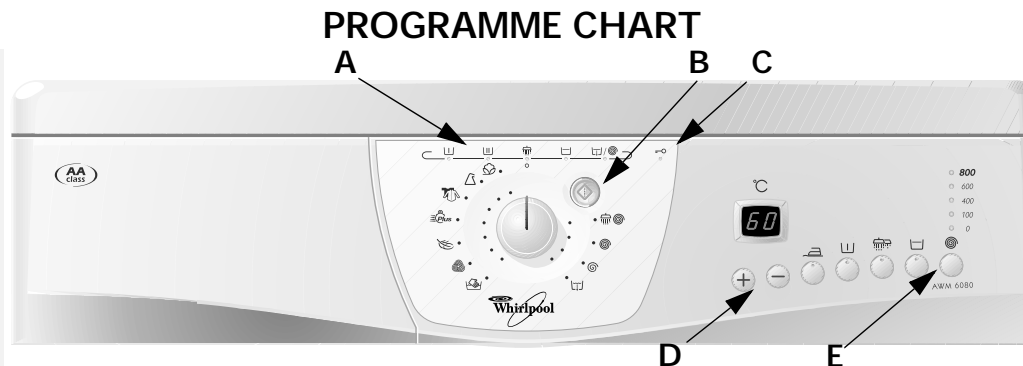

## PROGRAMME CHART

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

\*: optional / Yes: dosing required

- <sup>1</sup> For improved garment care spin speed is restricted to 600 rpm in this programme.
- <sup>2</sup> In this programme default spin speed can be increased till 400 rpm.

Programme	Care Labels	Type of wash/Notes	Max Load Kg	Detergents and additives				Special options					Max Spin Speed rpm	Temperature Selector °C	Programme Selector
				Bleach	Softener	Main Wash	Pre-wash	Easy Ironing	Prewash	Intensive Rinse	Rinse Hold	Spin Speed Reduction			
Cotton/ Coloured cotton		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.0	*	*	Yes	*	*	*	*	*	*	800	Max. 95°	
Synthetics		Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	—	*	Yes	*	*	*	*	*	* <sup>1</sup>	600 <sup>1</sup>	Max. 60°	
Daily		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	*	Yes	—	*	—	*	*	*	800	Max. 60°	
Rapid Plus		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	—	*	Yes	—	*	—	*	*	*	800	Max. 30°	
Delicates		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	—	*	Yes	*	—	*	—	*	* <sup>1</sup>	600 <sup>1</sup>	Max. 40°	
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	*	Yes	—	—	—	—	*	* <sup>1</sup>	600 <sup>1</sup>	Max. 40°	
Handwash		Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	—	*	Yes	—	—	—	—	*	* <sup>2</sup>	400 <sup>2</sup>	Max. 30°	
Rinse + spin	—	<i>Same as the last rinse and the final spin in the "Coloured Cotton" programme.</i>	5.0	—	*	—	—	*	—	*	*	*	800	—	
Spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.</i>	5.0	—	—	—	—	—	—	—	—	*	800	—	
Gentle spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	—	—	* <sup>1</sup>	600 <sup>1</sup>	—	
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—	—	—	

## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	95	4.5	49**	1.70	2:05
Cotton	60	5.0	46	0.95	2:20
Cotton	40	4.5	44	0.60	2:05
Synthetics	60	2.0	55	0.80	1:30
Synthetics	40	2.0	55	0.60	1:20
Daily	40	3.0	40	0.50	1:00
Rapid Plus	30	3.0	37	0.40	0:30
Delicates	30	1.5	60	0.50	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	60	0.30	0:50

Prewash might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the programme selector to the desired programme.
2. The "Start/Pause" button is flashing.
3. Select the temperature by pressing "+" or "-" button below the temperature display.
4. Select the spin speed by pressing the spin speed button - the selected spin speed is indicated by the indication next to it.
5. Select any desired option by pressing the option button.

## SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of options, temperature and spin speed is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Easy Ironing" button

- Can be used together with with Cotton, Synthetics, Daily and Rapid Plus programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

### "Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

## "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme sequence indication is on.

### Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob counter-clockwise to the Drain programme and press the "Start/Pause" button again when flashing. You have to press "Start" button within 15 seconds after reselecting the programme.

## "Spin Speed Reduction" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## PROGRAMME START

Open the tap and press the "Start/Pause" button. The "Start/Pause" button lights up. The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding lamp goes out.

## DOOR LOCK

The door can be opened when the "Door Open" indication is on.

## PROGRAMME END

- All the lights of the programme sequence indication are off.
1. Turn the programme selector to the "0" - "Off" position.
  2. Turn the water supply tap off.
  3. Open the door and unload the machine.
  4. Close the tap and leave the door ajar to allow the drum to dry out.

## CHANGE THE PROGRAMME, OPTIONS AFTER PROGRAMME START

1. Press the "Start/Pause" button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL A PROGRAMME BEFORE THE END

1. Press the "Start/Pause" button to pause the programme. The light flashes.
2. Set the programme selector to "Drain". The spin speed indicators show "0".
3. Press the "Start/Pause" button to start the drain programme.